

MODEL: S5026, S5027, S5033, S5037, S5040, S5047, S5067 / S5070, S5075, S5077, 5087, S5090, S5097


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

## INSTALLATION ON 4" JUNCTION BOX INTEGRAL DRIVER 120-277V (UNV)

- A- UNSCREW THE (4) SET SCREWS (INCLUDED) WITH ALLEN KEY TO REMOVE THE COVER FROM THE FIXTURE BASE. DO NOT COMPLETELY REMOVE SCREWS.
- B- DISCONNECT THE LED CONNECTOR AND KEEP THE COVER IN A SAFE PLACE.
- C- INSTALL UNIVERSAL CROSSBAR (INCLUDED) AND MAKE ALL NECESSARY CONNECTIONS (FOLLOWING WIRING DIAGRAM).
- D- INSTALL THE MOUNTING PLATE ON THE CROSSBAR AND USE THE (2) FLAT HEAD PHILIPS SCREW (INCLUDED).
- E- INSTALL THE BASE FIXTURE ON THE MOUNTING PLATE, USING THE FLAT HEAD SCREWS (INCLUDED) AND THE (2) WASHERS FOR WATERTIGHT INSTALLATION.
- F- CONNECT THE LED CONNECTOR AND INSTALL THE COVER. (FOR MINI MODEL, CONNECT THE GROUND WITH THE QUICK CONNECTOR.) SCREW BACK COVER WITH THE (4) SET SCREWS USING THE INCLUDED ALLEN KEY.

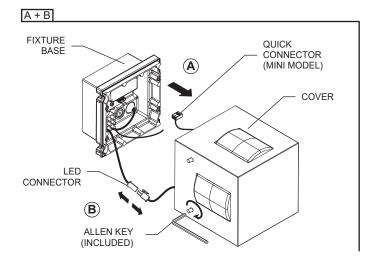

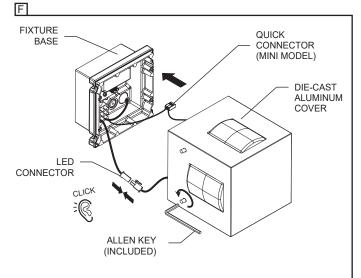

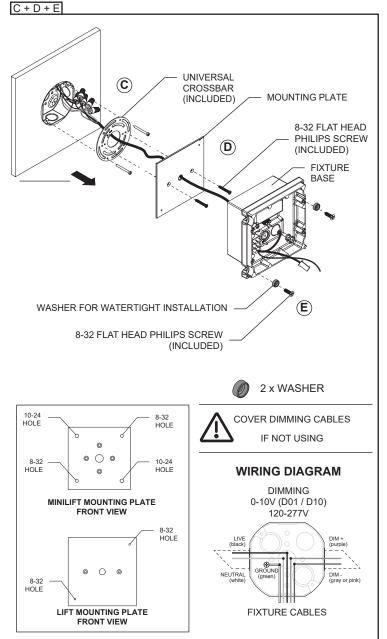

Last update: January 12, 2022

DM - R4